

Click below Brand which you are looking for or Search the models/code which you are looking for directly!

Back

Type	Brand	Pages
Printer	OKI	P2
Printer	Kyocera	P2
Printer	Samsung	P2
Printer	HP	P3
Printer	Lexmark	P3
Printer	Minolta	P4
Printer	Ricoh	P4
Printer	Brother	P4
Printer	FUJIFILM	P5
Copier	Minolta2	P6
Copier	Ricoh2	P6
Copier	Canon	P6
Copier	Kyocera2	P7
Copier	Sharp	P7
Copier	Toshiba	P7
Copier	FUJIFILM2	P8
Copier	HP2	P9



OKI ®

UCT CODE	Compatible Models	Compatible Models
UP-4052	OKI C301,321 MC332,342	OKI C3300,3400,3450,3600,3520,3530 MC350,360
	OKI C310,330 MC351,352,361,362	OKI C5600,5650,5700,5750
	OKI C510,511,530,531 MC561,562	OKI C5550,5800,5900
	OKI C331,C332 MC563	OKI C8600,8800
UP-4056	OKI C532,542dn MC563,573	OKI C612dn,712dn
UP-4057	OKI C801,821,822	OKI C810,830,831,841
	OKI C823,833,843	OKI C710,711
UP-4054K	OKI B401 MB441,451	OKI B411,431 MB461,471,491
	OKI B412,432,512 MB472,492,562	
UP-4060	OKI C650dn	Sindoh P450,451

[Back](#)



OKI C650dn

Kyocera ®

UCT CODE	Compatible Models	Compatible Models
UP-1250	Kyocera FS-C5100 (TK-540)	Kyocera FS-C5200 (TK-550)
	Kyocera FS-C5400 Ecosys P7035 (TK-570)	Kyocera FS-C5300,5350 Ecosys P6030 (TK-560)
	Kyocera FS-C5150 P6021 (TK-580)	Kyocera FS-C2026,2126,2526,2626,5250 (TK-590)
	Kyocera P6026,M6026,6526 (TK-590)	
UP-1252	Kyocera ECOSYS P5021,M5521 (TK-5220)	Kyocera ECOSYS P5026,M5526 (TK-5250)
	Kyocera ECOSYS P5021,M5521 (TK-5230)	Kyocera ECOSYS P6130,M6030,6530 (TK-5140)
	Kyocera ECOSYS P5018 (TK-5333)	Kyocera ECOSYS P6035,M6035,6535 (TK-5150)
	Kyocera TASKalfa 350ci,351ci (TK-5305)	Kyocera TASKalfa 352ci (TK-5345)
	Kyocera ECOSYS P6230,M6230,6630 (TK-5270)	Kyocera ECOSYS P6235,M6235,6635 (TK-5280)
	Kyocera ECOSYS PA2100,MA2100 (TK-5440)	Ricoh P C600
UP-1266K	Kyocera PA4500x,MA4500ifx (TK-3400)	Kyocera PA5000x (TK-3410)
	Kyocera PA5500x,MA5500ifx (TK-3430)	Kyocera PA6000x,MA6000ifx (TK-3440)
NEW UP-1268	Kyocera ECOSYS PA3500cx MA3500cix (TK-5372)	Kyocera ECOSYS PA4000cx MA4000cix (TK-5382)
	Kyocera TASKalfa MA4500ci (TK-5417)	



Kyocera ECOSYS PA3500

Samsung ®

UCT CODE	Compatible Models	Compatible Models
UP-7050	Samsung CLP300,350 CLX2160,3160	Samsung CLP310,315 CLX3170,3175
	Samsung CLP320,325 CLX3185	Samsung CLP360,365 CLX3305
	Samsung Xpress C410,460,430,480w	Xerox Phaser 6110
	Lenovo CS1821,1831 CM7120,7110	HP Laser 150 MFP 178,179
	Dell 1235cn	
UP-7051	Samsung CLP610,660 CLX6200	Samsung CLP620,670 CLX 6220,6250
	Samsung CLP770,775ND	
UP-7052	Samsung CLP415,CLX4195,C1810w	Samsung Xpress C2620DW,Pro Xpress C2670FW
	Samsung CLP680,CLX6260	
UP-7056K	Samsung ML-5510,5515,6510,6515	Xerox Phaser 4600,4620,4622



HP Laser 150 MFP 178,179



HP®

[Back](#)

UCT CODE	Compatible Models	Compatible Models
UP-8061	HP Color LaserJet Pro M154,MFP M180,181	HP Color LaserJet Pro M252,274,MFP M277
	HP Color LaserJet Pro M254,280,MFP M281	HP Color LaserJet Pro M452,MFP M377,477
	HP Color LaserJet Pro MFP M476	HP LaserJet Pro M454,MFP M479
	HP Color LaserJet Pro 200 color M251	HP LaserJet Pro 500 Color MFP M570dw
	HP Color LaserJet Pro MFP M176,177	HP Color LaserJet CM2320 MFP Series
	HP Color LaserJet 2700,3000,3600,3800,CP3505	HP Color LaserJet CP3525,CM3530
	HP Color LaserJet CP5225,5520,5525, M750	HP Color LaserJet 4600,4650,4700,5500,5550,CP4005
	HP Color LaserJet Enterprise CM4540	HP LaserJet Enterprise M552,553,577
	HP LaserJet Enterprise 500 Color M551dn	HP LaserJet Enterprise 300,400 color M351,375,475
	HP LaserJet Enterprise 500 Color MFP M575dn	HP LaserJet Enterprise 700 color MFP M775dn
	HP Color LaserJet Enterprise M856,MFP M776	HP Color LaserJet Enterprise M455,480
	HP LaserJet Enterprise M652,653,681,682	HP Color LaserJet Pro M255,MFP M282,M283
UP-8063	HP LaserJet Enterprise M751 (W2000-W2003A/X)	HP Color LaserJet Pro 4201 (W2100-2103A/X)
NEW UP-8065	HP Color LaserJet Pro MFP 4301 (W2100-2103A/X)	Canon LBP670C,MF750C Series (069/H)
	Canon i-SENSYS X,image CLASS X C1333 (T12)	Canon i-SENSYS LBP673C,LBP674CX,LBP672C (069/H)
	Canon i-SENSYS MF751/752/753/754/755(069/H)	Canon LBP 851,852Ci, 853Ci (CRG-059/H,CRG-053H)



HP LaserJet Enterprise
M652,653,681,682

Lexmark®

UCT CODE	Compatible Models	Compatible Models
UP-5051	Lexmark C540,543 X543	Lexmark C544,546 X544
	Lexmark CS310,410 CX310,410	Lexmark CS510 CX510
	Lexmark CS317,417,517 CX317,417,517	Lexmark C2325,2425,2535 MC2325,2425,2535,2640
	Lexmark CS421,521,522,622 CX421,521,522,622	Xerox C310,315
	Lenovo CS2310,3310	Lenovo C8300,8700
	Pantum CP2500DN CM7000F,7105	Pantum CP2505DN
	Pantum CP2506DN CM7006FDN	Pantum CP2510,5055 CM5055,7115
	Pantum CP5155,5165	FUJIFILM ApeosPrint C3320,3380
	FUJIFILM ApeosPort Print C3830SD	Sindoh P431dn, C431
	Toshiba e-STUDIO 338cs,388cs,388cp	
UP-5056K	Lexmark MS317,417,517,617	Lexmark MX317,417,517,617
	Lexmark MS321,421,521,621,622	Lexmark MX321,421,521,522,622
	Lexmark B2442,2546,2650	Lexmark B2338,MB2338adw
UP-5054	Lexmark CS720,725 CX725	Lexmark CS730,735 CX730,735
	Sharp MX-C407F,507F	Sindoh P701dn
	Dell S5840	Xerox VersaLink C625
UP-5057	Lexmark C3224dw,C3326dw,C3426dw	Lexmark CS331,431 CX331,431
	Pantum CP2200DW CM2200FDW	Pantum CP1100,1108 CM1100,1108
	FUJIFILM ApeosPort C2410SD	Sindoh P300dn,C300dn
	Xerox C230,C235	Ricoh P C200W



Lexmark CS331,431 CX331,431



Ricoh®

[Back](#)

UCT CODE	Compatible Models	Compatible Models
UP-1150	Ricoh Aficio SP C220,221,222,240	Ricoh Aficio SP C252,262
	Ricoh Aficio SP C250,260,261	Ricoh Aficio SP C311,312 C231,232,242,310,
	Ricoh Aficio P C300,301	Ricoh Aficio SP C342,341,251
UP-1155K	Ricoh Aficio SP 3600,3610,4510	Ricoh Aficio SP 6430
	Ricoh Aficio SP 4520	
UP-1160	Ricoh Aficio SP C352	Ricoh Aficio SP C360,361
UP-1166K	Ricoh P 501 IM 430Fb	Ricoh P 502 IM430F



Ricoh Aficio SP C352

Konica Minolta®

UCT CODE	Compatible Models	Compatible Models
UP-1050	Konica Minolta Magicolor 1600,1650,1680,1690	Konica Minolta bizhub C15P,C17,C18
	Konica Minolta Magicolor 1700w	Xerox Phaser 6120,6115MFP
	Epson Aculaser C1600,CX16	OKI C110,130n MC160n
UP-1051	Konica Minolta Magicolor 3730	Konica Minolta Magicolor 4650,4690,4695
	Konica Minolta bizhub C35P	Konica Minlota Magicolor 5550,5670,5650,5570
	Konica Minolta bizhub C3100P,3110	Konica Minolta bizhub C3850
UP-1061	Epson Aculaser C3900,CX37DN	Epson WorkForce AL-C300N
	Konica Minolta bizhub C3350i,4050i (TNP-79)	Konica Minolta bizhub C3320i (TNP-80)
	Konica Minolta bizhub C3300i,4000i (TNP-81)	



Konica Minolta bizhub C3300i

Brother®

UCT CODE	Compatible Models	Compatible Models
UP-9050	Brother HL-3040,3070 DCP-9010	Brother HL-L8250,8350 DCP-L8400,8450
	Brother MFC-9120,9320	Brother MFC-L8650,8850
	Brother HL-4570,DCP-9270 MFC-9970	Brother HL-3140,3150,3170 MFC-9130,9330,9340
UP-9052	Brother HL-4140,4150 DCP-9055	Brother MFC-9460,9465
	Brother HL-L8260,8360 DCP-L8410 MFC-L8690,8900	Brother HL-L9430CDN MFC-L9630CDN



Brother MFC-L8650,8850



FUJIFILM/Fuji Xerox®

[Back](#)

UCT CODE	Compatible Models	Compatible Models
UP-2052	Fuji Xerox Docuprint CP105,205,215	Fuji Xerox Docuprint CP115,116,225,228
	Fuji Xerox Docuprint CM205,215	Fuji Xerox Docuprint CM115,225,228
	Xerox Phaser 6000,6010 Workcentre 6015	Xerox Phaser 6020,6022 Workcentre 6025,6027
	Fuji Xerox Docuprint CP118,119 CM118	Dell 1250,1350,1355
	Epson Aculaser C1700,1750 CX-17	NEC Color MultiWriter 5600,5650
	Dell 1250,1350,1355	Dell C1760,1765
	Dell E525w	
UP-2066	Fuji Xerox Docuprint CP405 CM405,415	Xerox Phaser 6600 Workcentre 6605,6655
	Xerox VersaLink C400,405	NEC Color MultiWriter 5900C2,5900CP2
	Dell C2660,2665,3760,3765	Dell S3840,3845
UP-2067	Xerox VersaLink C500,505,600,605	Fuji Xerox Docuprint CP500d
	Fuji Xerox Docuprint CP475 AP	Fuji Xerox ApeosPort-VII CP3322,4422
	FUJIFILM Apeos C5240	NEC Color MultiWriter 7700C
	Ricoh IM C530FB	
UP-2069K	Fuji Xerox Docuprint P355,M355	Fuji Xerox Docuprint P455,M455
	Fuji Xerox Docuprint P365	Fuji Xerox Docuprint M465
	Xerox Phaser 3610 Workcentre 3615	Xerox Workcentre 3655
	Xerox VersaLink B400,405	Epson WorkForce AL-M300
	Epson WorkForce AL-M400	Dell H815dw
	NEC MultiWriter 5300	Dell S2810,2815
	NEC MultiWriter 5500	
UP-2071	Fuji Xerox Docuprint CP315,CM315	Fuji Xerox Docuprint CP318,CM318
	Xerox Phaser 6510 Workcentre 6515	NEC Color MultiWriter 5800C,5850C,400F
	Dell S2825 H625,825	
UP-2074K	Fuji Xerox Docuprint 4408,3508,3208d	FUJIFILM ApeosPrint 4560S,3960S,3360S
	Fuji Xerox Docuprint 3200,3500,4400d	NEC MultiWriter 8600,8700,8800
UP-2075K	Fuji Xerox Docuprint P505d	Fuji Xerox Docuprint P508d
	Fuji Xerox Docuprint P475 AP	Fuji Xerox ApeosPort-VII P501
	Fuji Xerox ApeosPort-VII P4022	Xerox VersaLink B600,605,610,615
	NEC MultiWriter 7200	
UP-2085	FUJIFILM ApeosPrint C320,325,328	FUJIFILM Apeos C320,325,328
	Konica Minolta bizhub C3120i,C3100i (TNP-92/93)	NEC Color MultiWriter 4C150,4F150



FUJIFILM Apeos C5240



FUJIFILM ApeosPrint C320,325,328



Konica Minolta®

[Back](#)

UCT CODE	Compatible Models	Compatible Models
UC-1053	Konica Minolta bizhub C221,281 (TN-220)	Konica Minolta bizhub C227,287,367 (TN-221)
	Konica Minolta bizhub C226,266 (TN-223)	Konica Minolta bizhub C7222,7226,C256 (TN-224)
	Konica Minolta bizhub C226i,286i (TN-228)	Konica Minolta bizhub C220,280,360 (TN-216,319)
	Konica Minolta bizhub C7222i,7228i (TN-229)	Konica Minolta bizhub C224,284,364 (TN-321)
	Konica Minolta bizhub C308,368 (TN-324)	Konica Minolta bizhub C454,554 (TN-512)
	Pantum CM8505DN,8506DN,9505DN	Pantum CP9500DN,9502DN
	Lexmark CS921,923,CX920,921,922,923,924	
UC-1055	Konica Minolta bizhub C452,552,652 (TN-613)	Konica Minolta bizhub Pro C5500,6500 (TN-610)
UC-1058	Konica Minolta bizhub C360i,300i,250i (TN-328)	Sindoh D450,451,452
UC-1059	Konica Minolta bizhub C450i,550i,650i (TN-626)	Sindoh D730,731,732
UC-1060	Konica Minolta bizhub C659,759 (TN-713)	Sindoh P450,451
UC-1068	Konica Minolta bizhub PRESS C800 (TN-615)	Konica Minolta bizhub PRESS C1060,1070 (TN-619)
	Konica Minolta AccurioPress C2060,2070 (TN-619)	Konica Minolta AccurioPress C3070,3080 (TN-619)
	Konica Minolta AccurioPress C4070,4080 (TN-619)	Konica Minolta bizhub Pro C1060L,2060L (TN-620)
	Konica Minolta AccurioPrint C3070L (TN-620)	Konica Minolta AccurioPress C4065 (TN-620)
	Konica Minolta bizhub PRESS C1100,1085 (TN-622)	Konica Minolta AccurioPress C6085,6100 (TN-622)



Konica Minolta bizhub C450i,550i

Ricoh®

UCT CODE	Compatible Models	Compatible Models
UC-1165	Ricoh Aficio MP C2003,2011,2503	Ricoh Aficio MP C2004,2504
	Ricoh Aficio MP C3003,3503	Ricoh Aficio MP C3004,3504
	Ricoh Aficio MP C4503,5503,6003	Ricoh Aficio MP C4504,5504,6004
	Ricoh Aficio MP C300,400,401	Ricoh Aficio MP C306,307,406
	Ricoh Aficio MP C407	Ricoh Aficio SP C840,842
	Ricoh Aficio SP C430,431,440	Ricoh Aficio IM C2000,2500
	Ricoh Aficio IM C3000,3500	Ricoh Aficio M C2000,2001
	Ricoh Aficio IM C300,300F,C400SRF,400F	
NEW UC-1170	Ricoh Aficio IM C2010	Ricoh Aficio IM C2510,3010
	Ricoh Aficio IM C4510,3510	Ricoh Aficio IM C5510,6010



Ricoh Aficio IM C2010

Canon®

UCT CODE	Compatible Models	Compatible Models
UC-1751	Canon iR-ADV C2020,2025,2030 (NPG-52)	Canon iR-ADV C2220,2225,2230 (NPG-52)
	Canon iR-ADV C5030,5035 (NPG-46)	Canon iR-ADV C5235,5240 (NPG-46)
	Canon iR-ADV C5045,5051 (NPG-45)	Canon iR-ADV C5250,5255 (NPG-45)
	Canon iR-ADV C3320,3325,3330 (NPG-67)	Canon iR-ADV C3520,3525,3530 (NPG-67)
	Canon iR C3120,3125 (NPG-67)	Canon iR-ADV C3020,3025 (NPG-67)
	Canon iR-ADV DX C3720,3725,3730 (NPG-67)	Canon iR C3222L,3130L,3226 (NPG-67)
	Canon iR-ADV DX C3826,3830,3835 (NPG-67)	
UC-1755	Canon iR-ADV C5535,5540,5550,5560 (NPG-71)	Canon iR-ADV DX C5735,5740,5750,5760 (NPG-71)
UC-1758	Canon iR-ADV DX C5840,5850 (NPG-83)	Canon iR-ADV DX C5860,5870 (NPG-83)
NEW UC-1760	Canon imageRUNNER C3322L (NPG-88)	Canon imageRUNNER C3326 (NPG-88)
	Canon iR-ADV DX C3926,3930,3935 (NPG-88)	



Canon imageRUNNER C3322L



Kyocera®

UCT CODE	Compatible Models	Compatible Models
UC-1253	Kyocera TASKalfa 400,500,552ci (TK-855)	Kyocera TASKalfa 250,300ci (TK-860)
	Kyocera FS-C8025,8020,8525,8520 (TK-895)	Kyocera TASKalfa 2550ci (TK-8315)
	Kyocera TASKalfa 205c,255c (TK-897)	Kyocera TASKalfa 206ci,256ci (TK-897)
UC-1255	Kyocera TASKalfa 2552,2553ci (TK-8345)	Kyocera TASKalfa 3252,3253ci (TK-8335)
	Kyocera TASKalfa 356ci (TK-5205)	Kyocera TASKalfa 306ci,307ci (TK-5195)
	Kyocera TASKalfa 406ci (TK-5215)	Kyocera TASKalfa 2554ci (TK-8368)
UC-1258	Kyocera TASKalfa 3050ci,3550ci (TK-8305)	Kyocera TASKalfa 2551 (TK-8325)
	Kyocera TASKalfa 3051ci,3551ci (TK-8305)	
UC-1259	Kyocera ECOSYS M8224,8228cidn (TK-8148/8158)	Kyocera ECOSYS M8124,8130cidn (TK-8115)
UC-1270	Kyocera TASKalfa 3552ci,3553ci (TK-8525)	Kyocera TASKalfa 4052ci,4053ci (TK-8525)
	Kyocera TASKalfa 5052ci,5053ci (TK-8515)	Kyocera TASKalfa 6052ci,6053ci (TK-8515)
	Kyocera ECOSYS P8060cdn (TK-8800)	
NEW UC-1280	Kyocera TASKalfa 4054ci (TK-8548)	Kyocera TASKalfa 5054ci,6054ci,7054ci (TK-8558)

[Back](#)



Kyocera TASKalfa 2554ci

Sharp®

UCT CODE	Compatible Models	Compatible Models
UC-1851	Sharp MX-2610,2615,2640,3110,3115 (MX-36)	Sharp MX-2600,2601,3100,3101,4100,4101 (MX-31)
	Sharp MX-3140,3610,3640 (MX-36)	Sharp MX-5000,5001 (MX-31)
	Sharp MX-2310,2616,3111,3116 (MX-23)	Sharp DX-2508NC,2008UC (MX-25)
	Sharp MX-2311,3112 (MX-23)	Sharp MX-4110,4140,4141,5110,5111 (MX-51)
	Sharp MX-4148,5148 (MX-51)	Sharp MX-5140,5141 (MX-51)
	Sharp BP-C2521,2021 (CT-20)	Sharp SF-S211,261 (CT-20)
UC-1852	Sharp MX-3070,3570,4070,5070,6070 (MX-60)	Sharp MX-3050,3550,4050,5050,6050 (MX-60)
	Sharp MX-3081,3581,4081 (MX-60/MX-30)	Sharp MX-3071,3571,4071,5071 (MX-61)
	Sharp MX-C2651R,3051R (MX-60/MX-30)	Sharp MX-C2621R,3121R (MX-60/MX-30)
	Sharp MX-C4082,3582,3082 (MX-60)	Sharp MX-6082,5082 (MX-60)
UC-1855	Sharp BP-50C26,50C31,50C36 (BP-NT70)	Sharp BP-50C45,50C55,50C65 (BP-NT70)
	Sharp BP-70C31,70C36 (BP-NT70)	Sharp BP-70C45,70C55,70C65 (BP-NT70)



Sharp BP-70C31,70C36

Toshiba®

UCT CODE	Compatible Models	Compatible Models
UC-1654	Toshiba e-STUDIO 2000,2500AC (FC-505)	Toshiba e-STUDIO 2505,3005,3505 (FC-505)
	Toshiba e-STUDIO 2010,2510AC (FC-415)	Toshiba e-STUDIO 2515,3015,3515 (FC-415)
	Toshiba e-STUDIO 2110,2610,2615 (FC-415)	Toshiba e-STUDIO 3115AC (FC-415)
	Toshiba e-STUDIO 2020,2520AC (FC-425)	Toshiba e-STUDIO 2525,3025AC (FC-425)
UC-1656	Toshiba e-STUDIO 4505,5005AC (FC-505)	Toshiba e-STUDIO 3525,4525,5525,6525AC (FC-425)
	Toshiba e-STUDIO 4615,5115AC (FC-415)	Toshiba e-STUDIO 4515,5015AC (FC-415)



Toshiba e-STUDIO 2525,3025



FUJIFILM/Fuji Xerox®

[Back](#)

UCT CODE	Compatible Models	Compatible Models
UC-2056	Fuji Xerox DocuCentre-IV C2270,2275	Fuji Xerox DocuCentre-IV C3371,3373
	Fuji Xerox DocuCentre-IV C3370,4470,5570	Fuji Xerox DocuCentre-IV C3375,4475,5575
	Fuji Xerox DocuCentre-V C2275,3373,3375	Fuji Xerox DocuCentre-V C5580,5585,6680
	Fuji Xerox DocuCentre-V C4475,5575,6675	Fuji Xerox DocuCentre-V C6685,7780,7785
	Fuji Xerox DocuCentre-IV C5580,6680,7780	Fuji Xerox DocuPrint C4000,5000,5005d
	Fuji Xerox DocuPrint C4140,5150,5155d	Xerox Phaser 7800
	Xerox WorkCentre 7425,7428,7435	Xerox WorkCentre 7525,7530,7535,7545,7556
	Xerox WorkCentre 7830,7835,7845,7855	Xerox WorkCentre EC7836,7856
	Xerox 700i/700,700i/770 Color C75,J75	Xerox Color 550,560,570, WorkCentre 7965,7975
	Xerox AltaLink C8030,8035,8045,8055	Lexmark C950,X950,952,954
	NEC Color MultiWriter 9950C	NEC Color MultiWriter 9600C
	Dell C7765	
UC-2072K	Fuji Xerox DocuCentre-V 2060,3060,3065	Xerox VersaLink B7025,7030,7035
	Xerox VersaLink B7125,7130,7135	FUJIFILM Apeos 2560,3060,3560
	Pantum BM260,310,410ADN	
UC-2073	Fuji Xerox DocuCentre-IV C2260,2263,2265	Fuji Xerox DocuCentre-V C2263,2265
	Fuji Xerox DocuCentre SC2020	Fuji Xerox DocuCentre SC2022
	Fuji Xerox ApeosPort C2060,2560,3060	Fuji Xerox DocuPrint C3360
	Xerox WorkCentre 7120,7125,7220,7225	Xerox VersaLink C7020,7025,7030
	Xerox VersaLink C7000	Xerox VersaLink C7120,7125,7130
	Xerox Phaser 7500	Fuji Xerox DocuPrint C2250,2255
	NEC Color MultiWriter 600F	Lexmark CX930,931
	Pantum CM250,260,310,410ADN	Dell 7130
UC-2079K	Fuji Xerox ApeosPort 3570,4570,5570	Xerox AltaLink B8145,8155,8170
UC-2080	Fuji Xerox DocuCentre-VI C3371,4471,5571	Fuji Xerox DocuCentre-VII C4473,5573,6673,7773
	Fuji Xerox DocuCentre-VI C2271,3370	Fuji Xerox DocuCentre-VII C2273,3372,3373
	Fuji Xerox ApeosPort C5570,6570,7070	Xerox AltaLink C8130,8135,8145,8155,8170
	Fuji Xerox ApeosPort C3070,3570,4570	Xerox VersaLink C8000,9000
	FUJIFILM ApeosPrint C5570	NEC Color MultiWriter 3C730,3C750
	Lexmark CS943de	Lexmark CX942,943,944



Xerox VersaLink B7125,7130,7135



FUJIFILM ApeosPrint C5570



HP/Samsung ®

[Back](#)

UCT CODE	Compatible Models	Compatible Models
UC-7053	Samsung SL-X3220NR,3280NR (CLT-804)	Samsung CLX-9201,9251,9301 (CLT-809)
	Samsung MultiXpress SL-X4220RX (CLT-808)	Samsung CLX-9250,9258,9252 (CLT-606)
	Samsung MultiXpress SL-X4250LX,4300LX (CLT-808)	Samsung CLX-9350,9358 (CLT-606)
	HP LaserJet Managed MFP E77822,77825,77830	HP LaserJet Managed MFP E78323,78325,78330
UC-7058K	HP LaserJet Managed MFP E77422,77428	
	Samsung MultiXpress SL-K4250RX (MLT-D708L)	Samsung MultiXpress SL-K4300LX (MLT-D708L)
	Samsung MultiXpress SL-K4350LX (MLT-D708L)	Samsung SCX-8123,8128 (MLT-D709S)
UC-7060	HP LaserJet Managed MFP E72525/E72530	HP LaserJet Managed MFP E72535
	Samsung SL-X7400,7500,7600 (CLT-806)	HP LaserJet Managed MFP E87640,87650,87660
UC-7062	HP Color LaserJet Managed Flow E78625	HP Color LaserJet Managed Flow E78630,78635
	HP LaserJet Managed MFP E78523	HP Color LaserJet Managed Flow E78223,78228
	Samsung MFP MX6 SL-G256X,SL-G306X (CLT-601)	Samsung MFP MX6 SL-X6250,6300,6350LX (CLT-601)
UC-7063K	HP LaserJet Managed MFP E82540z (W9014MC)	HP LaserJet Managed MFP E82550z (W9014MC)
	HP LaserJet Managed MFP E82560z (W9014MC)	Samsung MultiXpress K7400,7500,7600
UC-7066	HP Color LaserJet Managed Flow E87740,87750	HP Color LaserJet Managed Flow E87760,87770
	Samsung MFP MX9 SL-G409,SL-G509X (CLT-901)	Samsung MFP MX9 SL-X9400,9500,9600LX (CLT-901)



HP LaserJet Managed Flow E78635

NEW

